


# パイプオルガン ストップリスト

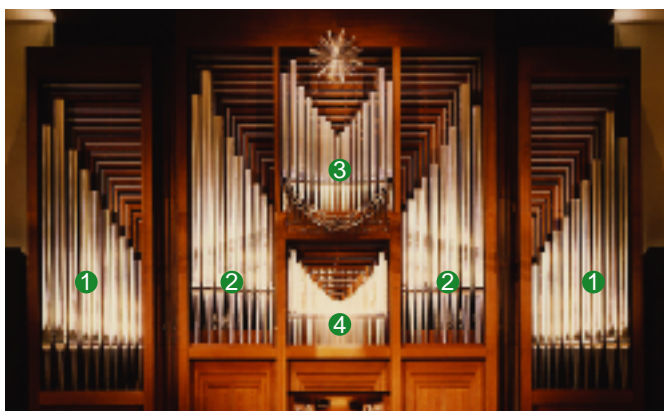

## ① 足鍵盤 PEDAL C-f1

Untersatz	32'
Prinzipal	16'
Subbaß	16'
Oktavbaß	8'
Gedackt	8'
Choralbaß	4'
Rohrpfeife	4'
Dolkan	2'
Rauschwerk	IV
Mixtur	VI
Kontrafagott	32'
Posaune	16'
Baßtrompete	8'
Fanfare	4'
Sing. Cornett	2'

## ② 第1手鍵盤 HAUPTWERK C-a3

Prinzipal	16'
Oktave	8'
Rohrflöte	8'
Unda maris	8'
Viola di Gamba	8'
Oktave	4'
Blockflöte	4'
Quinte	2 2/3'
Oktave	2'
Schweizer Pfeife	2'
Terz	1 3/5'
Mixtur	V
Cymbel	IV
Cornett	V
Trompete	16'
Trompete	8'
Trompete	4'
Span. Trompete	8'

## ③ 第3手鍵盤 SCHWELLWERK C-a3

Weitgedackt	16'
Zartgeige	16'
Flötenprinzipal	8'
Doppelflöte	8'
Salicional	8'
Vox celeste	8'
Oktave	4'
Dulzflöte	4'
Dublette	2'
Quinte	1 1/3'
Großmixtur	V-VII
Kleinmixtur	III
Echocornett	V
Bombarde	16'
Tromp. harmon.	8'
Hautbois	8'
Clairon	4'
Tremulant	

## ④ 第2手鍵盤 POSITIV C-a3

Quintatön	16'
Prästant	8'
Flute harmonique	8'
Holzgedackt	8'
ital. Prinzipal	4'
Rohrflöte	4'
Nassat	2 2/3'
Oktave	2'
Waldflöte	2'
Terz	1 3/5'
Gemsquinte	1 1/3'
Flageolett	1'
Mixtur	IV
Krummhorn	8'
Vox humana	8'
Schalmey	4'
Tremulant	
Zimbelstern	